



Installation video  
QR code

Note:

1.The installation instructions may differ slightly from the actual operation. If there are any differences,please follow the actual situation or contact us.

2.Warning: Please do not disassemble any part by yourself,any improper operation will not be covered by our warranty.

3. Please turn off the vehicle power before installing the product.

Installation Steps



1.Product list

Steering wheel, large H10 wrench, 2 flat head screwdrivers.



2. Turn off the host power in the vehicle setting.



3. There is a hole on the left and right sides of the steering wheel. Insert and Jack the airbag spring with a flat head screwdriver respectively.



4. The internal diagram and spring schematic diagram of parallel screwdriver insertion.




5. Take out the airbag and pull out the airbag plug and steering wheel plug, then take off the airbag



6. Note that the steering wheel plug must be pulled out to avoid pulling out the hairspring.




7. Screw out the steering wheel screw with a large H10 wrench.

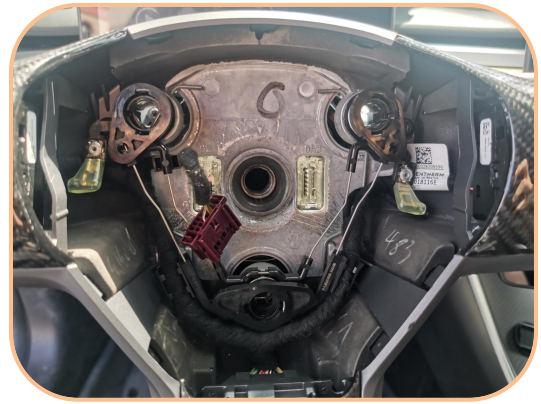

8. Then pull out the steering wheel. If the steering wheel is too tight, shake it left and right and pull it out slowly.



9. Do not turn the hairspring after pulling out the steering wheel.

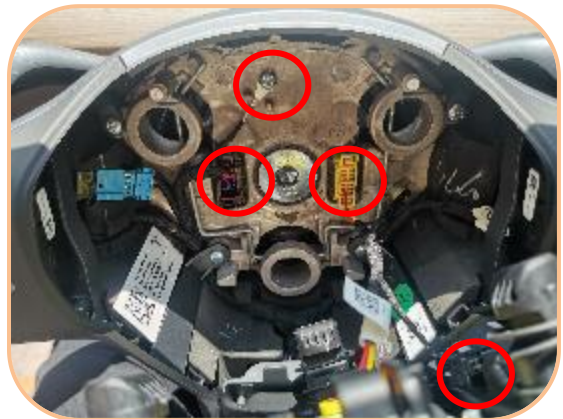

10. Then remove the harness of the original steering wheel and install it on the new steering wheel, then buckle the speaker harness and plug in the plug.



11. Finally, insert the airbag plug, and insert the airbag into the spring bayonet.



12. Test the speaker and buttons after installation.