


Note:


- 1.The installation instructions may differ slightly from the actual operation. If there are any differences,please follow the actual situation or contact us.
- 2.Warning: Please do not disassemble any part by yourself,any improper operation will not be covered by our warranty.
3. Please turn off the vehicle power before installing the product; Cut off the negative pole of the frunk battery and unplug the power plug at the bottom of the rear seat.
4. Before installing the product, watch the installation video and manual carefully.

Aftersale Service:
+86 156 2278 2181
(phone/whatsapp)

Product List

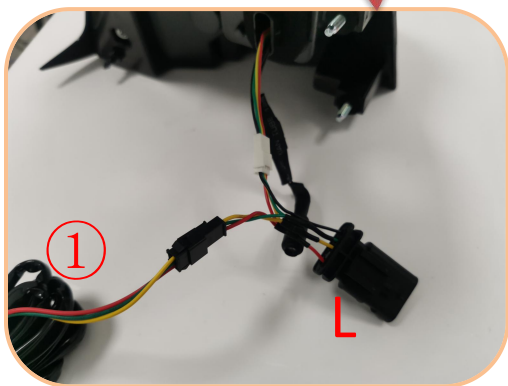

A - Wiring diagram of left lower tail light

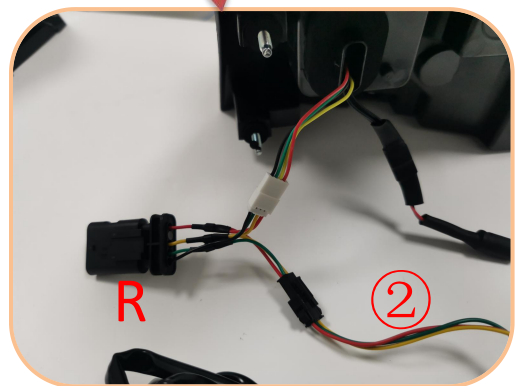

B - Wiring diagram of right lower tail light


Installation Steps



1. First remove the trunk interior trim pad



2. Remove the trim cover

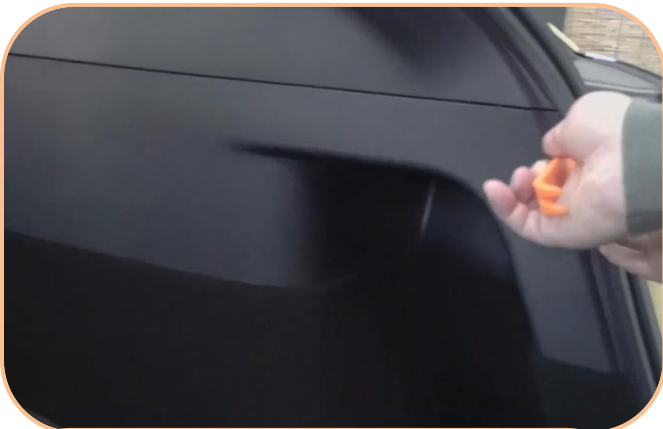

3. Pry off the trim panel cover on the right (the same operation on the left)



4. Pry off the rear tail light cover, unscrew two nuts on the interior trim panel, and then remove the tail light (the same operation on the left)




5. First remove the upper cover and the left and right buckles, and then remove the trim panel cover

6. Unscrew the nut of the upper tail light, pry out the upper tail light and replace it with tail lamp C & D



7. According to the instructions in the picture, thread ① and ② through the rubber tube of the original car and pull it to the upper tailgate



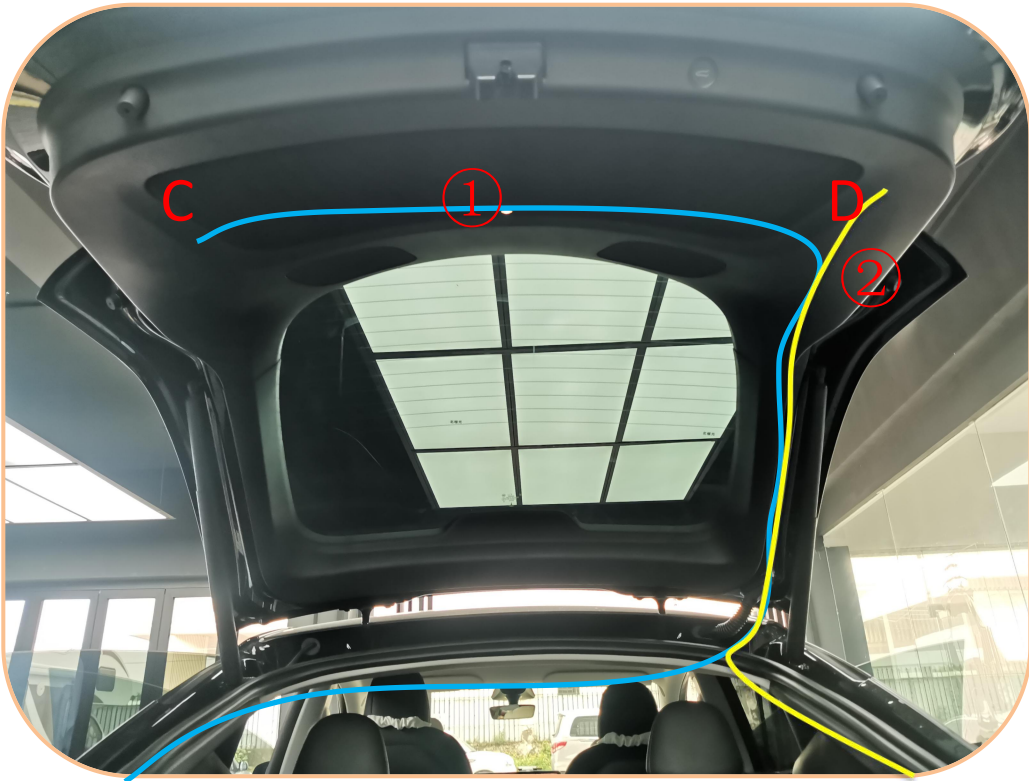

8. After pulling the harness to the upper tailgate, pull it to the corresponding position and connect the plugs according to the instructions in the picture



9. Connect the plugs of tail light (C&D) with the original vehicle plug