

Model 3/Y Full-Width Strip Tail Light Installation Manual

Notes:


- 1. The installation instructions may be slightly different from the actual operation. If there is any difference, please contact us according to the actual situation.
- 2.Warning: Do not remove any parts by yourself. Any improper operation is not covered by the warranty.
- 3. Before installing the product, please turn off the vehicle power and cut off the battery negative pole of the frunk
- 4.Please watch the installation video and instructions before installation
- 5. Warning: Because the driver chips on each side are on the vehicle body taillight, all lights should be powered on only after all wiring is completed. The flat light and full-width light bar cannot be powered on separately to avoid burning.



tutorial video



Product Diagram

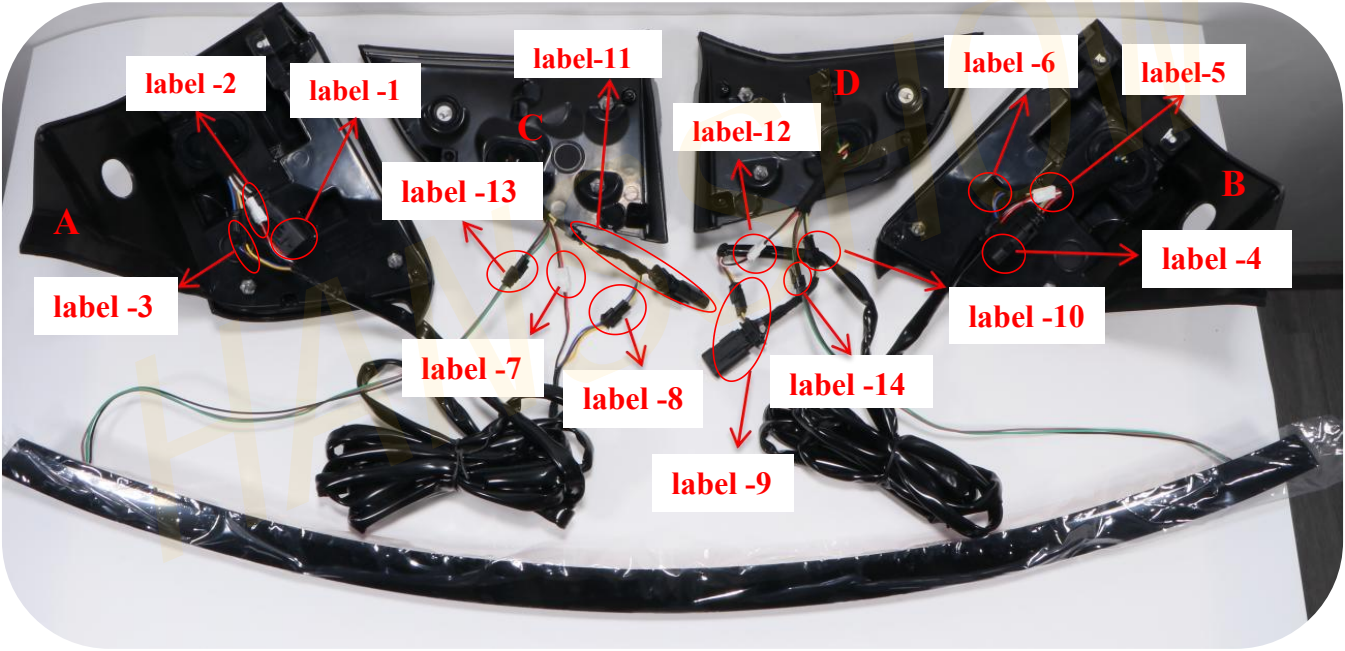


Label Description

label -1	Left body taillight adapter plug	label -8	Left tailgate flat light signal extension cable ②
label -2	Left body taillight signal extension cable ①	label -9	Right tailgate flat light signal extension cable ①
label-3	Left body taillight signal extension cable ②	label -10	Right tailgate flat light signal extension cable ②
label -4	Right body taillight adapter plug	label -11	Left tailgate flat light adapter plug
label-5	Right body taillight signal extension cable ①	label -12	Right tailgate flat light adapter plug
label -6	Right body taillight signal extension cable ②	label -13	Left signal plug of full-width taillight
label -7	Left tailgate flat light signal extension cable ①	label-14	Right signal plug of full-width taillight

Installation Steps




1. Pry open the rear tail light cover
(same operation on the left side)

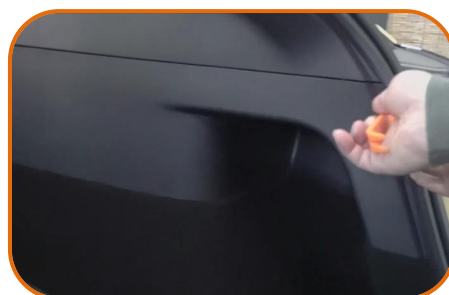

2. Pry open the trim cover
(same operation on the left side)



3. Unscrew two nuts on the
interior trim panel and then
remove the tail light (same
operation on the left side)

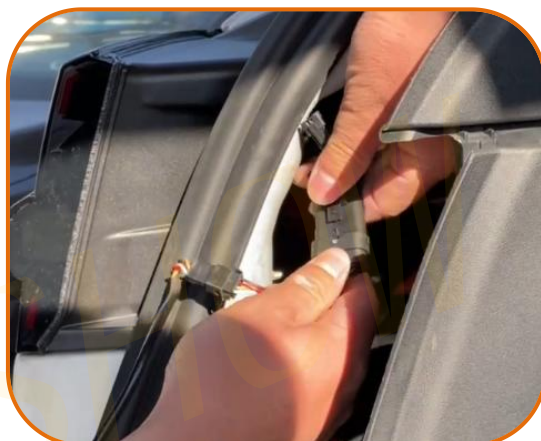

4. Connect **label-1** (left body taillight lamp
adapter plug) with the original vehicle signal
plug; Connect the extension cable plug with
the new body taillight (**Label-2 and Label-3**);
Right side: **label-4** (left body taillight lamp
adapter plug), **label-5 and label -6**(extension
cable plug)




5. Remove the upper cover
Remove the left and right buckles first, and then take off
the trim panel cover



6. Route the left extension cable (label-7 and label-8), and right extension cable (label-9 and label-10) through the rubber tube of the original vehicle to the upper tailgate



7. Unscrew the nut of the upper tail light, pry out the upper tail light and replace it with the new taillight

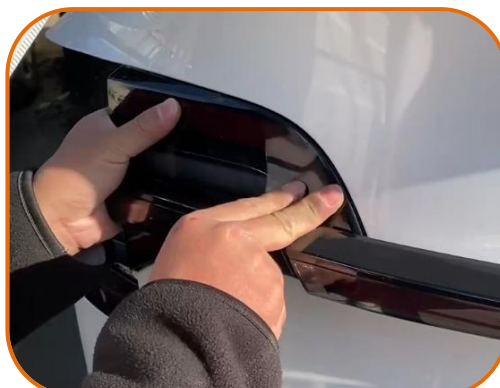

8. After removing the original flat light, thread the full-width strip light bar plug (Label-13 and Label-14) into the vehicle along the flat light hole; and then install the flat taillight (the same operation for left and right)

Model 3/Y Full-Width Strip Tail Light Installation Manual



9. Remove the tape on the back of the full-width strip light bar and stick the light bar above the rear tailgate



10. Connect the left extension cable plug (Label-2 and Label-3) to the flat taillight plug (Label-7 and Label-8);

Connect the right extension cable plug (Label-5 and Label-6) to the flat taillight plug (Label-9 and Label-10);

Connect the plug (label-13 and label-14) with the original flat light plug



11. Complete the installation and power on to test the taillights

Warning: Because the driver chips on each side are on the vehicle body taillight, all lights should be powered on only after all wiring is completed. The flat light and full-width light bar cannot be powered on separately to avoid burning out the taillights.