Note:

- 1. The installation instructions may differ slightly from the actual operation. If there are any differences, please follow the actual situation or contact us.
- 2. Warning: Please do not disassemble any part by yourself, any improper operation will not be covered by our warranty.



Installation steps




1. Right and left electric suction lock



2.Lift the triangular tweeter up and unplug the tweeter plug



3. There are 3 screws on the door panel handle, and then pry open the door panel with the prying tool

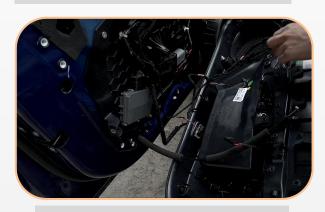

4. After prying the door panel, remove the plug connecting the door panel



5. Lock the door lock



6.Unscrew the two screws of the window




7.Remove the window protective strip



8.Lift the window glass up carefully




9.Unscrew the screws of the inner plate and disassemble the original trunking

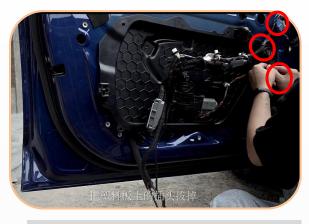

10.Unplug the loudspeaker and other plugs



11.Unscrew the 3 screws of the original electric suction lock

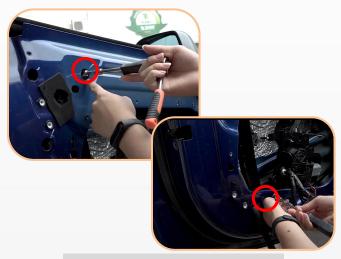

12.Unscrew the two screws of the window regulator




13.Unplug the electric suction plug and take down the electric suction lock of the original vehicle



14.Replace with new electric suction lock and plug in the plug of the original car



15.Replace with 3 new special screws

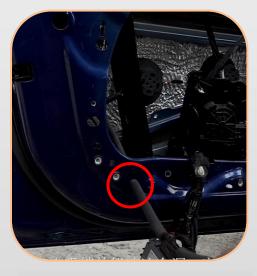

16. Take the electric suction lock pull cable out of the original hole



17. Screw back the two screws of the window regulator



18.Install back the inner plate and screw back the screws



19.Install the trunking back and connect the corresponding plug back in place



20. Align the glass with the hole, and then carefully install it back in place




21. Align the screw holes of the glass and the lifting frame, and screw the original vehicle screws (with two holes)



22.Install back the window protective strip



23. Press the corresponding hole in place

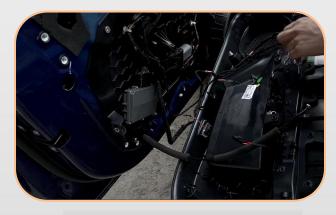

24. Connect the pull cable of the door panel and the plug



25. Align the door panel and install the buckle



26.Screw back the three screws of the door panel



27.Install back the triangle tweeter and complete the installation